



1080P **HDMI**[®]
PROGRESSIVE HIGH-DEFINITION MULTIMEDIA INTERFACE

Extender for HDMI ELR with POL 2 over CAT5

GEF-HDCAT5-ELRPOL2
User Manual

www.gefenpro.com

ASKING FOR ASSISTANCE

Technical Support:

Telephone (818) 772-9100
(800) 545-6900

Fax (818) 772-9120

Technical Support Hours:

8:00 AM to 5:00 PM Monday thru Friday, Pacific Time

For 24 / 7 support, see the back of the product for the support number

Write To:

Gefen, LLC.
c/o Customer Service
20600 Nordhoff St
Chatsworth, CA 91311

support@gefenpro.com
www.gefenpro.com

Notice

Gefen, LLC reserves the right to make changes in the hardware, packaging, and any accompanying documentation without prior written notice.

Extender for HDMI ELR with PoL 2 over CAT5

is a trademark of Gefen, LLC

HDMI, the **HDMI** logo, and **High-Definition Multimedia Interface** are trademarks or registered trademarks of HDMI Licensing in the United States and other countries.

© 2012 Gefen, LLC. All rights reserved.
All trademarks are the property of their respective owners.

Rev A5

CONTENTS

- 1 Introduction
- 2 Operation Notes
- 3 Features
- 4 Sender unit Layout
- 5 Sender unit Descriptions
- 6 Receiver unit Layout
- 7 Receiver unit Descriptions
- 8 IR Remote Control
 - 8 RMT-2IR Remote Control
 - 9 Installing the Battery
 - 9 Setting the IR Channel
- 10 Connecting the Extender for HDMI ELR PoL 2 over CAT5
- 11 Wiring Diagram
- 12 DIP Switch Configuration
 - 12 Sender unit
 - 14 Receiver unit
- 17 Firmware Update
- 18 Network Cable Wiring Diagram
- 19 Troubleshooting
- 20 Specifications
- 21 Warranty

INTRODUCTION

Congratulations on your purchase of the Extender for HDMI ELR PoL 2 over CAT5. Your complete satisfaction is very important to us.

GefenPRO

In the realm of video distribution, certain features are invaluable in a commercial or broadcast environment. Accommodations such as a build-in power supply and flat black rack-mount enclosures set GefenPRO apart from our traditional products. Complex distribution units allow for professional DVI, 3G-SDI, and HDMI signals to be routed and converted easily and seamlessly, while being backed up by a renowned and dependable technical support team. Gefen invites you to explore the GefenPRO product line and hopes that you find the solution that fits your needs.

The GefenPRO Extender for HDMI ELR with PoL 2 over CAT5

The GefenPRO Extender for HDMI ELR PoL 2 over CAT5 does everything that the GefenPRO Extender for HDMI ELR with PoL over CAT5 does, but adds active source switching, with an additional Hi-Def input on the Receiver unit. This feature provides the capability to switch between the (remote) Hi-Def source connected to the Sender unit and a local source connected to the Receiver unit. If a new source is connected to the Receiver unit and turned on, the Receiver unit will automatically switch to the local input. The Receiver unit will revert to the remote input once the local device is turned off or disconnected. The Select button on the Receiver unit can be used to manually switch between the remote and local inputs. An optional IR Remote Control Unit (Gefen part no. RMT-2IR) can also be purchased to switch between the remote input and the local input on the Receiver unit. The GefenPRO Extender for HDMI ELR PoL 2 over CAT5 extends a Hi-Def source with multichannel digital audio at resolutions of up to 1080p Full HD to 330 feet (100 meters), using one CAT-5 cable.

The Extender for HDMI ELR PoL 2 over CAT5 extends Ethernet and provides an RS-232 and IR back channel to control A/V sources using the same CAT-5 cable extension. The built-in IR Blaster allows you to point the IR remote(s) at the display to control the Hi-Def sources as if they were located in the same room.

How It Works

The GefenPRO Extender for HDMI ELR PoL 2 over CAT5 Sender unit is located next to a set-top box or DVD player source. Use the supplied HDMI cable to connect an HDMI source to the Sender unit. The GefenPRO Extender for HDMI ELR PoL 2 over CAT5 Receiver unit is located up to 330 feet away, near the display. Connect the HDTV display and another Hi-Def source to the Receiver unit.

One CAT-5 cable connects the Sender and Receiver units to each other. The Ethernet ports on both the Sender and Receiver units are connected to standard network devices, such as 100Base-T routers and hubs. Multichannel digital audio is embedded in the HDMI signal (Dolby® TrueHD / DTS-HD Master Audio™).

OPERATION NOTES

READ THESE NOTES BEFORE INSTALLING OR OPERATING THE EXTENDER FOR HDMI ELR WITH PoL 2 OVER CAT5

- The *Extender for HDMI ELR with PoL 2 over CAT5* units are housed in a metal box for better RF shielding.
- CAT-5 cables should not exceed 330 feet.
- Shielded CAT-6 with metal RJ-45 connectors are recommended to safeguard against random video flashes caused by electromagnetic interference (EMI).
- The *Extender for HDMI ELR with PoL 2 over CAT5* features the ability to generate compatible EDID and Hot Plug signals for troubleshooting purposes when dealing with difficult interfacing issues between Source devices and Displays. Refer to page 13 for details.
- HDCP content is not supported when the unit is in DVI mode. See page 16 for details.
- Ethernet works as a Full Duplex system.

FEATURES

HDMI Features

- 225 MHz (up to 12-bit YUV 444 @ 1080p)
- Deep Color
- x.v.Color
- Dolby® TrueHD and DTS-HD Master Audio™
- Lip Sync
- 3DTV

Features

- Extends HDMI at 1080p Full HD and 1920x1200 up to 330 feet
- Extends RS-232 up to 330 feet over a single CAT5
- Supports high bit-rate audio formats (Dolby® TrueHD and DTS-HD Master Audio™)
- Supports 3DTV
- Locking HDMI input port on Receiver unit allows the connection of a secondary Hi-Def source.
- Source-switching between Sender unit source and Receiver unit source.
- Fully HDMI and HDCP compliant
- EDID management for rapid integration of source and display devices
- Built-in IR Blaster allows IR remote control of source devices from remote viewing location
- Internal 110 / 220 V AC Power Supply
- 5V DC, 2.5 A Locking Power Supply output connector on Receiver unit
- Rack-mountable (with optional Gefen EXT-RACK-1U Rack Shelf)

Package Includes

- (1) Extender for HDMI ELR with PoL 2 over CAT5 - Sender unit
- (1) Extender for HDMI ELR with PoL 2 over CAT5 - Receiver unit
- (1) 6 ft. HDMI locking cable (M-M)
- (2) Sets of Rack Ears
- (1) AC power cord
- (1) Quick-Start Guide


SENDER UNIT LAYOUT

Front



1

Back

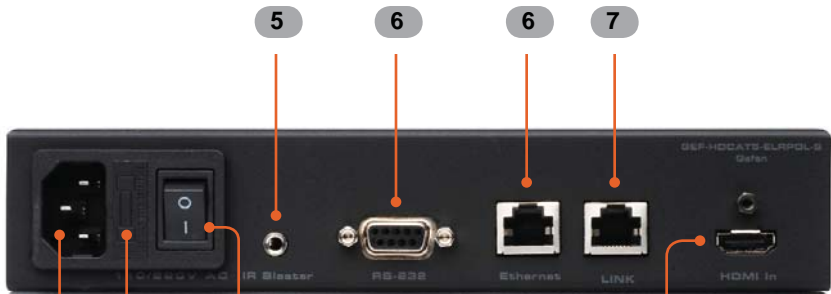

2

3

4

5

6

6

7

8

SENDER UNIT DESCRIPTIONS

1 Power

This 2-color LED indicator will glow bright RED when there is no HDMI source connected and will glow bright GREEN when an HDMI source is present.

2 110 / 220 V AC

Connect the included AC power cord to this power receptacle.

3 Fuse Drawer

Each power receptacle houses a fuse drawer. The fuse drawer contains an active fuse and a spare fuse. Both fuses are 250 V.

4 Power Switch

Turn the power ON or OFF using this switch.

5 IR Blaster

Connect an IR Blaster cable (Gefen part no. EXT-2IREMIT) from this port to the Hi-Def source to control the source from the viewing location.

6 RS-232

This RS-232 serial port is used to update the Receiver unit firmware.

7 Ethernet

Connects the Sender unit to the network using Ethernet cabling.

8 Link


Connects the Sender unit to the Receiver unit using CAT-5 cabling.

9 HDMI In


Connect a Hi-Def source to this locking HDMI port, using the included HDMI cable.

RECEIVER UNIT LAYOUT

Front

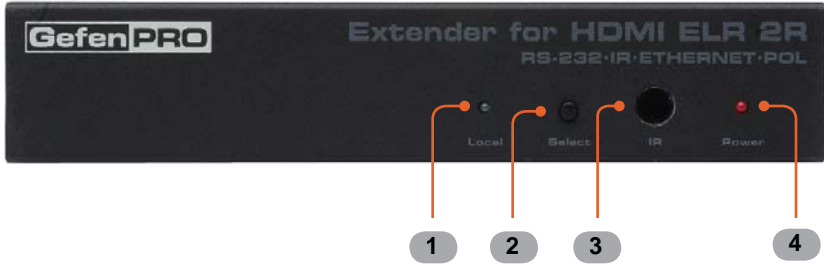

Back

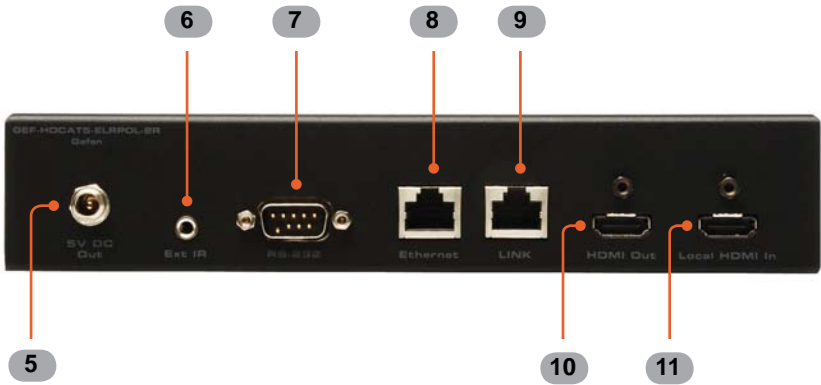

RECEIVER UNIT DESCRIPTIONS

- 1 Local**
This LED indicator will glow bright green when the Receiver unit is switched to use the Local HDMI input.
- 2 Select**
Switches between the HDMI input on the Sender unit and the Local HDMI In port on the Receiver unit.
- 3 IR**
This IR window receives signals from the Hi-Def source IR remote control. The IR signals are sent back to the source device, when using an IR Blaster on the Sender.
- 4 Power**
This 2-color LED indicator will glow bright RED when there is no HDMI source connected and will glow bright GREEN when an HDMI source is present.
- 5 5V DC Out**
Connect an optional locking (Gefen part no. CAB-PWR-06LL) or non-locking (Gefen Part no. CAB-PWR-06NL) power cord to this the included 5 V DC locking power supply connector to power additional devices.
- 6 Ext IR**
Connect an IR Extender (Gefen part no. EXT-RMT-EXTIR) cable from this port to the Hi-Def source to extend the IR control.
- 7 RS-232**
This RS-232 serial port is used to update the Receiver unit firmware.
- 8 Ethernet**
Connects the Receiver unit to the network device.
- 9 Link**
Connects the Receiver unit to the Sender unit using CAT-5 cabling.
- 10 HDMI Out**
Connect an HDTV display or other output device to this locking HDMI port.
- 11 Local HDMI In**
Connect a secondary Hi-Def source device to this locking HDMI port.

IR REMOTE CONTROL

RMT-2IR Remote Control (not included)



1 **Activity Indicator**

This LED will be activated momentarily each time a button is pressed.

2 **Input Source Selection Buttons (1 - 2)**

These buttons function the same as the Select button on the Receiver unit. Press button 1 to switch to the remote input (source connected to the Sender unit). Press button 2 to switch to the local input (source connected to the Receiver unit).

IR Codes

ASCII	Corresponding RMT-2IR Button	Binary
1	1	0011 0001
2	2	0011 0010




NOTE: An Activity Indicator that flashes quickly while holding down any one of the 16 buttons indicates a low battery. Replace the IR Remote Control battery as soon as possible.

IR REMOTE CONTROL

Installing the Battery

The Remote Control unit ships with two batteries. One battery is required for operation and the other battery is a spare.

1. Remove the battery cover on the back of the IR Remote Control unit.
2. Insert the included battery into the open battery slot. The positive (+) side of the battery should be facing up.
3. Replace the battery cover.

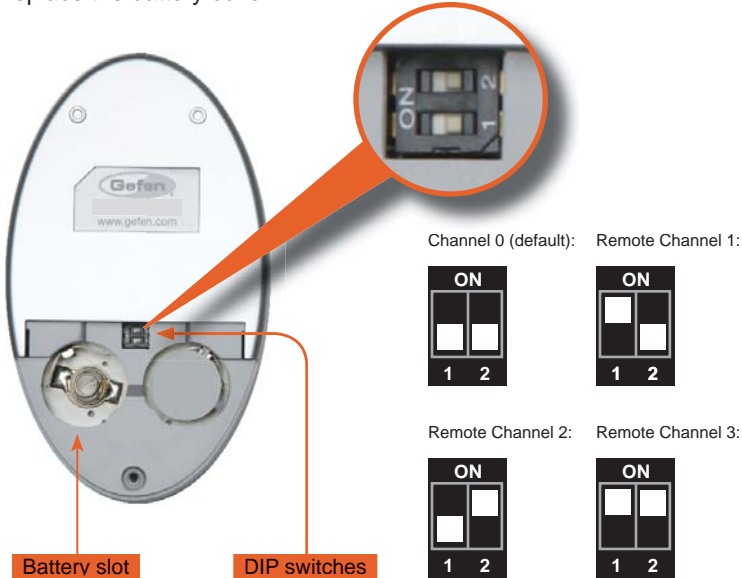

Setting the IR Channel

The IR channel on the IR Remote Control must match the IR channel used by the *Extender for HDMI ELR with PoL 2 over CAT5*. For example, if both DIP switches on the IR Remote Control unit are set to IR channel 0 (both DIP switches down), then the *Extender for HDMI ELR with PoL 2 over CAT5* must also be set to IR channel 0. See page 15 for information on how to change the IR channel on the *Extender for HDMI ELR with PoL 2 over CAT5*.



WARNING: Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

CONNECTING THE EXTENDER FOR HDMI ELR WITH POL 2 OVER CAT5

1. Connect the Hi-Def source to the Sender unit using the included HDMI cable.
2. Optionally connect a secondary Hi-Def source to the Receiver unit.

Connecting a secondary Hi-Def source to the Receiver unit provides the ability to switch between the a Hi-Def source connected to the Sender unit and the Hi-Def source connected to the Receiver unit. In this way, the *Extender for HDMI ELR with PoL 2 over CAT5* functions as both a 2x1 Switcher and an Extender.

3. Use an HDMI cable to connect the HDTV display to the Receiver unit.
4. Connect the Ethernet device/router to the Ethernet input port on the Sender unit using a CAT-5, CAT-5e or CAT-6 cable. Connect the Ethernet output port on the Receiver unit to the remote device/router with a CAT-5, CAT-5e or CAT-6 cable.
5. Use a CAT-5 or CAT-6 cable up to 330 feet (100 meters) to connect the Link ports on both the Sender unit and Receiver unit.



NOTE: If terminating network cables in the field, please adhere to the TIA/EIA568B specification. See page 18 for details.

6. Connect the included AC power cord to the Sender unit. Plug the power cord into an available electrical outlet.




NOTE: Connect an optional power cable (CAB-PWR-06LL or CAB-PWR-06NL) to the Receiver unit. The Receiver unit supplies 5V DC (@ 2.5A) to power an additional device.

7. Power on the HDTV display and the Hi-Def source(s) connected to the Sender unit and the Receiver unit.

CONNECTING THE EXTENDER FOR HDMI ELR WITH POL 2 OVER CAT5

Wiring Diagram for the Extender for HDMI ELR with PoL 2 over CAT5

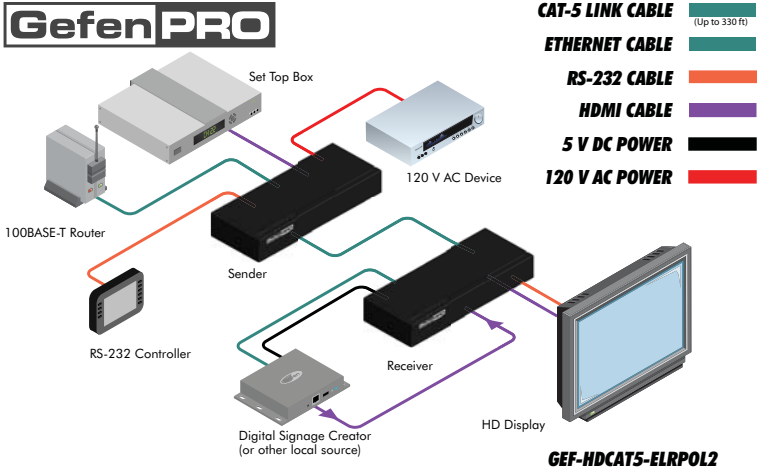


WARNING: This product should always be connected to a grounded electrical socket.

DIP SWITCH CONFIGURATION

Sender Unit

The *Extender for HDMI ELR with PoL 2 over CAT5* contains two DIP switches on the bottom of the Sender Unit. Each DIP switch performs a different function.

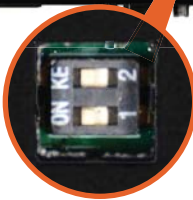

DIP switches located on the bottom of the Sender Unit.

DIP Switch 1 - Green Mode (Default = OFF)

- **OFF** - Enable Green Mode

When DIP switch 1 on the Sender Unit is set to the OFF position, the Sender Unit is placed in Green Mode. In this mode, the unit is not powered unless +5V is detected on pin 18 of the HDMI cable. Green Mode consumes less than 1 Watt of power.

- **ON** - Disable Green Mode

If DIP switch 1 is set to the ON position, then the Sender Unit is always powered.



NOTE: Both the Sender Unit and Receiver Unit must be placed in Green Mode in order to use the Green Mode feature

DIP SWITCH CONFIGURATION

Sender Unit

DIP Switch 2 - Field-Upgrade Mode (Default = OFF)

- ***ON - Enable Field Upgrade Mode (VALENS chip)***

Allows the firmware to be upgraded on the Receiver unit. If DIP switch 6 and/or 7 are in the ON position, RS-232 cannot be extended. See page 15 for details on upgrading the firmware.


- ***OFF - RS-232 Pass-Through***

Use when extending RS-232 between the Sender unit and the Receiver unit. DIP switch 6 and 7 must be set to the OFF position for normal operation of the *Extender for HDMI ELR with PoL 2 over CAT5*.

DIP SWITCH CONFIGURATION

Receiver Unit

The *Extender for HDMI ELR with PoL 2 over CAT5* contains eight DIP switches on the bottom of the Receiver Unit. Each of these DIP switch performs a different function.

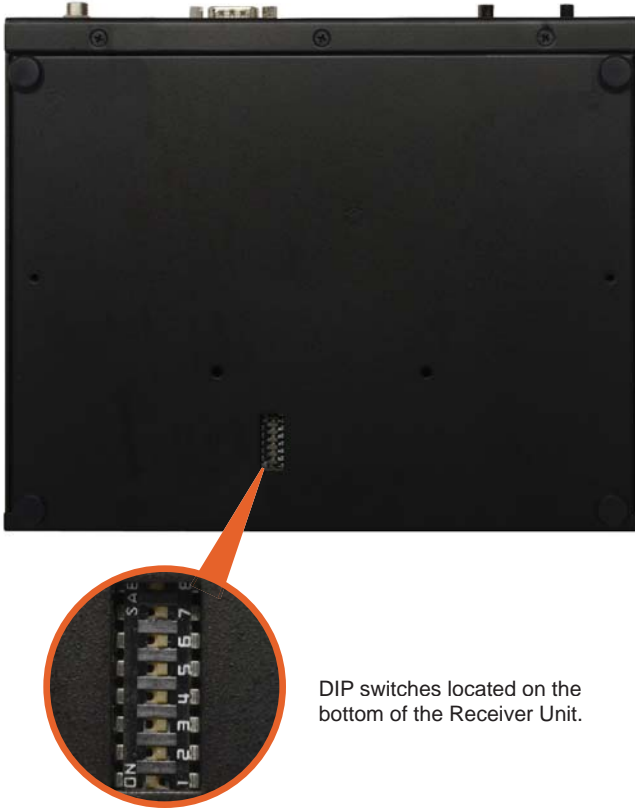

DIP switches located on the bottom of the Receiver Unit.

DIP Switch 1 - EDID Mode (Default = OFF)

- **ON** - Pass-Through Mode

DDC and HPD are passed through. Both the connection status and the full video capabilities of the monitor are used by the source device.

- **OFF** - Local EDID Mode

Local EDID is used instead of the EDID from the display device. EDID features newer than HDMI 1.3 are removed when the display is read. This provides a general EDID which is compatible with more displays.

DIP SWITCH CONFIGURATION

Receiver Unit

DIP Switch 2 - Hot Plug Detect (Default = OFF)

- **ON** - HPD Pass-Through

HPD follows upstream HPD towards the source. The HPD signal will reflect the connection status between the display device and the source device. If the source or monitor is temporarily disconnected then reconnected, there will be a delay of 20 - 30 seconds before the content is restored to the monitor.

- **OFF** - HPD Always High

The HPD signal remains high regardless of the downstream HPD state. If the source or monitor does not properly handle HPD (no picture after connecting / reconnecting source or display), set this DIP switch to the OFF position.

DIP Switch 3 - Support DVI Connections (Default = OFF)

- **ON** - Disable HDCP

If a DVI connection is used, set DIP 3 to the ON position. DVI is supported by disabling HDCP pass-through.

- **OFF** - Enable HDCP

If an HDMI device is connected, set DIP 3 in the OFF position.

DIP Switch 4 and DIP Switch 5 - IR Channel

- The diagrams below indicate the settings for DIP switches 4 and 5 in order to set the IR channel on the *Extender for HDMI ELR with PoL 2 over CAT5*.

Channel 0 (default):



Remote Channel 1:



Remote Channel 2:



Remote Channel 3:



NOTE: DIP switch 2 (HPD) and 3 (HDCP) are operational only if DIP switch 1 (EDID mode) is set to the OFF position.

DIP SWITCH CONFIGURATION

Receiver Unit

DIP Switch 6 - Field-upgrade Mode (Default = OFF)

- ***ON - Enable Field Upgrade Mode (Cortex chip)***

Allows the firmware to be upgraded on the Receiver unit. If DIP switch 6 and/or 7 are in the ON position, RS-232 cannot be extended. See page 15 for details on upgrading the firmware.

- ***OFF - RS-232 Pass-Through***

Use when extending RS-232 between the Sender unit and the Receiver unit. DIP switch 6 and 7 must be set to the OFF position for normal operation of the *Extender for HDMI ELR with PoL 2 over CAT5*.

DIP Switch 7 - Field-Upgrade Mode (Default = OFF)

- ***ON - Enable Field Upgrade Mode (VALENS chip)***

Allows the firmware to be upgraded on the Receiver unit. If DIP switch 6 and/or 7 are in the ON position, RS-232 cannot be extended. See page 15 for details on upgrading the firmware.

- ***OFF - RS-232 Pass-Through***

Use when extending RS-232 between the Sender unit and the Receiver unit. DIP switch 6 and 7 must be set to the OFF position for normal operation of the *Extender for HDMI ELR with PoL 2 over CAT5*.

DIP Switch 8 - Green Mode (Default = OFF)

- ***OFF - Enable Green Mode***

When DIP switch 1 on the Receiver Unit is set to the OFF position, the Receiver Unit is placed in Green Mode. In this mode, the unit is not powered unless +5V is detected on pin 18 of the HDMI cable. Green Mode consumes less than 1 Watt of power.

- ***ON - Disable Green Mode***

If DIP switch 1 is set to the ON position, then the Receiver Unit is always powered.



NOTE: Both the Sender Unit and Receiver Unit must be placed in Green Mode in order to use the Green Mode feature

FIRMWARE UPDATE

Firmware Update Procedure

The latest firmware update can be found on the Gefen Web site under *Support > Downloads*.


Sender Unit

1. Set DIP switch 1 and 2 on the Sender unit to the ON position.
2. Connect an RS-232 cable from the Sender unit to the computer containing the firmware.
3. Reboot the Sender unit by disconnecting and reconnecting the power supply.
4. Run the .BAT file to begin the update process.
5. After the firmware update process has completed, return DIP switch 1 and 2 to the OFF position.

Receiver Unit


1. Set DIP switch 7 and 8 on the Receiver unit to the ON position.
2. Connect a null modem RS-232 cable from the Receiver unit to the computer containing the firmware.
3. Reboot the Receiver unit by disconnecting and reconnecting the power supply.
4. Run the .BAT file to begin the update process.
5. After the firmware update process has completed, return DIP switch 7 and 8 to the OFF position.

NETWORK CABLE WIRING DIAGRAM

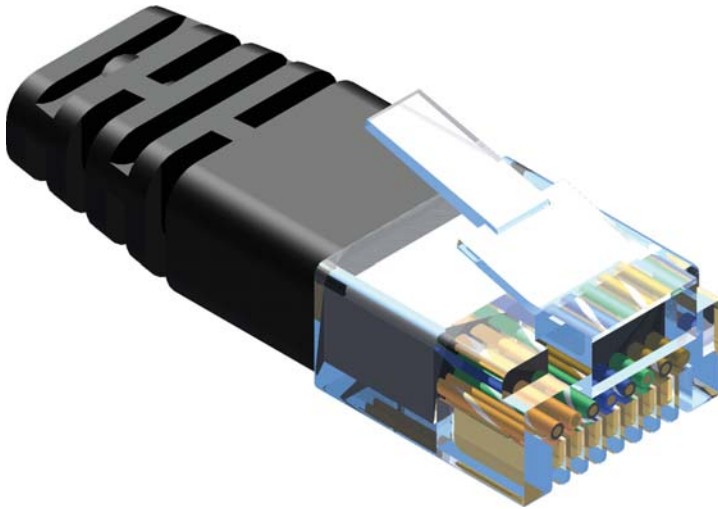

Gefen recommends the TIA/EIA-568-B wiring option. Please adhere to the table below when field terminating cable for use with Gefen products.

Pin	Color
1	Orange / White
2	Orange
3	Green / White
4	Blue
5	Blue / White
6	Green
7	Brown / White
8	Brown

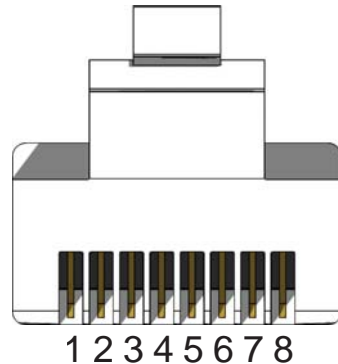

CAT-5, CAT-5e, and CAT-6 cabling comes in stranded and solid core types. Gefen recommends using solid core cabling. CAT-6 cable is also recommended.

It is recommended to use one continuous run from one end to the other. In some cases, connecting through a patch might not work.

TROUBLESHOOTING

Cable recommendations

Solid core CAT-5e cable rated at 350 MHz and terminated in 568a or 568b is the minimum requirement. For resolutions greater than 1280x1024 or 1080i, Gefen recommends solid shielded CAT-6 cables.

No video

Make sure that DIP switch 2 on the Sender unit is set to the OFF position. Also make sure that both DIP switch 6 and 7 on the Receiver unit is set to the OFF position. If either of these DIP switches are in the ON position (*External Boot Loader Enable*, see page 14 and 17) then the Sender unit or Receiver unit will not function as an extender. Next, make sure that the CAT-5 cable, connecting the Sender unit and Receiver unit is connected to the LINK port. If this does not solve the issue, try disconnecting and then reconnecting the AC power cord from the Sender unit. Also, verify that both units are working with short CAT-5e cables (15 - 20 feet).

Intermittent loss of video

Flickering or a blinking image is the result of a loss of sync between the display and the source. Try lowering the source resolution (e.g. from 1080p to 720p). If this solves the issue, then the CAT-5 cables being used to connect the Sender unit and the Receiver unit are unable to handle the bandwidth of the higher resolution and thus you are losing sync. Replace the existing CAT-5 cables with a shielded CAT-6 cable. Electromagnetic Interference (EMI) from fluorescent lights, generators, and A/C unit motors can also cause intermittent loss of video. Shielded CAT-6 cable with the drain wire soldered to the connectors will resolve the issue. Also make sure to eliminate any patch panels and wall plates. Patch panels and wall plates are prone to EMI if they are not shielded properly.

Image is tinted green or pink

An image that is tinted green or pink is the result of the incorrect color space being transmitted. Make sure that the display and source both support the same color space. Setting DIP switch 1 on the Receiver unit, to the OFF position, will use the Local EDID. EDID features newer than HDMI 1.3 are removed when the display is read. This provides a general EDID which is compatible with more displays.

SPECIFICATIONS

Maximum Pixel Clock	225 MHz
Input Video Signal	1.2V p-p
Input DDC Signal	5V p-p (TTL)
HDMI Input Connector (Sender / Receiver)	(1) 19-pin, Type A, female
HDMI Output Connector (Receiver)	(1) 19-pin, Type A, female
RS-232 Connector (Sender)	(1) DB-9, female
RS-232 Connector (Receiver)	(1) DB-9, male
Ethernet Connector (Sender / Receiver)	(1) RJ-45, shielded
Link Connectors (Sender / Receiver)	(1) RJ-45, shielded
IR Blaster connector (Sender)	(1) 3.5 mm mini-mono jack
IR Extender connector (Receiver)	(1) 3.5 mm mini-stereo jack
Power Supply (Sender)	100 - 240VAC
Power Output Connector (Receiver)	5 V / 2.5 A DC, locking
Operating Temperature.....	0 °C ~ 45 °C / 32 °F ~ 113 °F
Storage Temperature.....	-20 °C ~ 60 °C / -4 °F ~ 140 °F
Humidity Range.....	20% - 90% RH (no condensation)
Dimensions (Sender / Receiver)	8.4" W x 1.7" H x 6.7" D
Shipping Weight	8 lbs.

WARRANTY

Gefen warrants the equipment it manufactures to be free from defects in material and workmanship.

If equipment fails because of such defects and Gefen is notified within two (2) years from the date of shipment, Gefen will, at its option, repair or replace the equipment, provided that the equipment has not been subjected to mechanical, electrical, or other abuse or modifications. Equipment that fails under conditions other than those covered will be repaired at the current price of parts and labor in effect at the time of repair. Such repairs are warranted for ninety (90) days from the day of reshipment to the Buyer.

This warranty is in lieu of all other warranties expressed or implied, including without limitation, any implied warranty or merchantability or fitness for any particular purpose, all of which are expressly disclaimed.

1. Proof of sale may be required in order to claim warranty.
2. Customers outside the US are responsible for shipping charges to and from Gefen.
3. Copper cables are limited to a 30 day warranty and cables must be in their original condition.

The information in this manual has been carefully checked and is believed to be accurate. However, Gefen assumes no responsibility for any inaccuracies that may be contained in this manual. In no event will Gefen be liable for direct, indirect, special, incidental, or consequential damages resulting from any defect or omission in this manual, even if advised of the possibility of such damages. The technical information contained herein regarding the features and specifications is subject to change without notice.

For the latest warranty coverage information, refer to the Warranty and Return Policy under the Support section of the Gefen Web site at www.gefen.com.

PRODUCT REGISTRATION

Please register your product online by visiting the Register Product page under the Support section of the Gefen Web site.



20600 Nordhoff St., Chatsworth CA 91311
1-800-545-6900 818-772-9100 fax: 818-772-9120
www.gefenpro.com support@gefenpro.com

